

Text Messaging

How to Send a Text Message

1. Press the "Menu" button.
2. Select the "Messaging" option.
3. Select "Send Message".
4. Select "Text".
5. Select message recipient(s) from your Contact List or enter recipient ten-digit telephone number(s) or email address(es). Select "Next".
6. Type your message.
 - a. In order to use the phone's full keyboard to type your message, the phone must be opened on the side, so that the screen is facing the same way as the keyboard letters.
7. Select "Next".
8. Select "Send".

How to Retrieve a Text Message

When you receive a new text message, your phone will play a notification ring and the message will appear on your screen.

To review all messages in your text messaging inbox.

1. Press the "Menu" button.
2. Select the "Messaging" option.
3. Select "Text Message".
4. Select "Inbox".
5. Select the message you would like to review.

Picture and Video Messaging

How to Send a Picture or Video Message to another Cellular Phone or to an Email Address

1. Take a picture or record a video with your wireless phone.
2. Select "Options".
3. Select "Send Msg".
4. If this is your first time using this service on your phone, you will be asked to activate your account. Enter a 4-6 digit password of your choosing to activate your account.
5. Select message recipient(s) from your Contact List or enter recipient ten-digit telephone number(s) or email address(es).
6. Select "Next".
7. Enter a message subject, add text or record a message, if you would like.
8. Select "Send".

OR, To send a saved picture or video:

1. Press the "Menu" button.
2. Select "Messaging".
3. Select "Send Message".
4. Select "Pic/Video Msg".
5. If this is your first time using this service on your phone, you will be asked to activate your account. Enter a 4-6 digit password of your choosing to activate your account.
6. Select message recipient(s) from your Contact List or enter recipient ten-digit telephone number(s) or email address(es).

7. Select "Next".
8. Select "In Phone".
9. Select the picture(s) or video(s) you would like to send.
10. Select "Next".
11. Enter a message subject, add text or record a message, if you would like.
12. Select "Send".

How to Retrieve a Picture or Video Message

When you receive a new picture or video message, your phone will play a notification ring and the message will appear on your screen.

To review all messages in your picture and video messaging inbox.

6. Press the "Menu" button.
7. Select the "Messaging" option.
8. Select "Pic/Video Msg".
9. Select "Inbox".
10. Select the message you would like to review.

How to Upload Pictures or Videos to your Online Album

1. Go to your phone's main Menu screen.
2. Select "Pic/Videos".
3. Select "My Pics/Videos".
4. Select the picture(s) or video(s) that you would like to upload.
5. Select "Options".
6. Select "Upload".
7. Select "My Uploads".

How to View your Online Album

From a PC:

1. Go to <http://mypictures.sasktel.com>.
2. Type in your 10-digit cellular phone number and enter your 4-digit password. (This is the password you chose when you sent your first picture/video message).

From your phone:

1. Press the "Menu" button.
2. Select "Pic/Videos".
3. Select "My Pics/Videos".
4. Select "Online Albums".

Downloads

Ringtones

How to Download Ringtones


1. Select "Menu".
2. Select "Downloads".
3. Select "Ringers".
4. Select "Get New Ringers".
5. Browse Ringtones and select the Ringtone you would like to download.

6. Select "Buy Now".
7. Select "Download Now".
8. Select "Continue download".
9. Select "OK".

OR, To Download Ringtones from MuchMusic or Sympatico:

1. Select "Menu".
2. Select "Web".
3. Select "Downloads".
4. Select "MuchMusic" or "Sympatico downloads".
5. Browse Ringtones and select the Ringtone you would like to download.
6. Select "Buy Now".
7. Select "Download Now".
8. Select "Continue download".
9. Select "OK".

How to Download Ringtones on your PC

1. Go to www.sasktel.com.
 - a. Click on "Personal".
 - b. Click on "Mobility".
 - c. Click on "Download Ringtones, Games and Graphics".
 - d. Click on "Start Downloading Now!"
2. If you have already registered to download content online
 - a. Enter your 10-digit cell phone number and password, then click "Go".If this is your first time downloading content online, click "Register Now"
 - a. Enter your 10-digit cell phone number, select your phone manufacturer (Samsung) and your phone model (Samsung U740 Double-flip™) and click "Register".
 - b. Your password will be sent to you in a text message.
 - c. Once you receive your password, enter your 10-digit cell phone number and password, then click "Go".
3. To search Ringtones:
 - a. Choose "Ringtones" from the "Search downloads" drop-down menu.
 - b. Type in the song name, artist or a keyword and click "Search".To browse Ringtones:
 - a. Click on "Ringtones" (under the "Downloads" heading).
 - b. Browse Ringtones by clicking on categories.
4. To preview a Ringtone, click .
5. To purchase a Ringtone, click "Buy".
6. Click the "I accept the Terms & Conditions" checkbox.
7. Click "Buy Now".
8. You will receive a Web Alert on your cell phone. Open the Web Alert and select "Go".
9. Select "Download Now".
10. Select "OK". Wait for the Ringtone to be downloaded to your phone.
11. To listen to the Ringtone, scroll to "Listen" and select "OK".
12. To set your Ringtone, scroll to "Set as" and select "OK"
 - a. Select "Voice Calls" to set this ringtone to play when you receive a phone call.
 - b. Select "Contacts" to set this ringtone to play when you receive a call from a specific person in your contact list.
 - c. Select "Messaging" to set this ringtone to play when you receive a text, picture or video message.
 - d. Select "Alarms" to set this ringtone to play when you set an alarm on your phone.
 - e. Select "Scheduler" to set ringtone to play for scheduled events.

How to Set your Ringtone

1. Select "Menu".
2. Select "Downloads".
3. Select "Ringers".
4. Scroll down to the ringtone you would like to set as your ringtone.
5. Select "Options".
6. Select "Set As".
 - a. Select "Voice Calls" to set this ringtone to play when you receive a phone call.
 - b. Select "Contacts" to set this ringtone to play when you receive a call from a specific person in your contact list.
 - c. Select "Messaging" to set this ringtone to play when you receive a text, picture or video message.
 - d. Select "Alarms" to set this ringtone to play when you set an alarm on your phone.
 - e. Select "Scheduler" to set ringtone to play for scheduled events

Games**How to Download Games**

1. Select "Menu".
2. Select "Downloads".
3. Select "Games".
4. Select "Get New Games".
5. Browse Games and select the game you would like to download.
6. Select "Buy Now".
7. Select "Download Now".
8. Select "OK".

How to Download Games on your PC

1. Go to www.sasktel.com.
 - a. Click on "Personal".
 - b. Click on "Mobility".
 - c. Click on "Download Ringtones, Games and Graphics".
 - d. Click on "Start Downloading Now!"
2. If you have already registered to download content online
 - a. Enter your 10-digit cell phone number and password, then click "Go".If this is your first time downloading content online, click "Register Now"
 - a. Enter your 10-digit cell phone number, select your phone manufacturer (Samsung) and your phone model (Samsung U740 Double-flip™) and click "Register".
 - b. Your password will be sent to you in a text message.
 - c. Once you receive your password, enter your 10-digit cell phone number and password, then click "Go". To search Games:
3. Choose "Games and Applications" from the "Search downloads" drop-down menu.
 - a. Type in the game name or a keyword and click "Search".To browse Games:
 - a. Click on "Games" (under the "Downloads" heading).
 - b. Browse Games by clicking on categories.
4. To purchase a game, click "Buy".
5. Click the "I accept the Terms & Conditions" checkbox.
6. Click "Buy Now".
7. You will receive a Web Alert on your cell phone. Open the Web Alert and select "Go".
8. Select "Download Now".

9. Select "OK". Wait for the game to be downloaded to your phone.
10. Select "Run" to play the game.

How to Play a Downloaded Game

1. Select "Menu".
2. Select "Downloads".
3. Select "Games".
4. Select the game you would like to play.

Screen Savers**How to Download Screen Savers**

1. Select "Menu".
2. Select "Downloads".
3. Select "Screen Savers".
4. Select "Get New Screen Savers".
5. Browse Screen Savers and select the screen saver you would like to download.
6. Select "Buy Now".
7. Select "Download Now".
8. Select "Continue download".
9. Select "OK".

OR, To Download a Screen Saver from MuchMusic or Sympatico:

1. Select "Menu".
2. Select "Web".
3. Select "Downloads".
4. Select "MuchMusic" or "Sympatico downloads".
5. Browse Screen Savers and select the screen saver you would like to download.
6. Select "Buy Now".
7. Select "Download Now".
8. Select "Continue download".
9. Select "OK".

How to Download Screen Savers on your PC

1. Go to www.sasktel.com.
 - a. Click on "Personal".
 - b. Click on "Mobility".
 - c. Click on "Download Ringtones, Games and Graphics".
 - d. Click on "Start Downloading Now!"
2. If you have already registered to download content online
 - a. Enter your 10-digit cell phone number and password, then click "Go".If this is your first time downloading content online, click "Register Now"
 - a. Enter your 10-digit cell phone number, select your phone manufacturer (Samsung) and your phone model (Samsung U740 Double-flip™) and click "Register".
 - b. Your password will be sent to you in a text message.
 - c. Once you receive your password, enter your 10-digit cell phone number and password, then click "Go".
3. To search Screen Savers:
 - a. Choose "Screensavers" from the "Search downloads" drop-down menu.
 - b. Type in the screen saver name or a keyword and click "Search".
4. To browse Screen Savers:

- a. Click on "Wallpapers" (under the "Downloads" heading).
 - b. Browse Screen Savers by clicking on categories.
5. To see a larger version of the image, click on the Screen Saver name.
6. To purchase a Screen Saver, click "Buy".
7. Click the "I accept the Terms & Conditions" checkbox.
8. Click "Buy Now".
9. You will receive a Web Alert on your cell phone. Open the Web Alert and select "Go".
10. Select "Download Now".
11. Select "OK". Wait for the screen saver to be downloaded to your phone.
12. To make this screen saver your phone's main display, select "Set As".
13. Select "Screen Saver".

How to set your Screen Saver

1. Select "Menu".
2. Select "Downloads".
3. Select "Screen Savers".
4. Scroll down to the screen saver you would like to set as your screen saver.
5. Select "Options".
6. Select "Set As".
 - a. Select "Screen Saver" to set this screen saver as your phone's main display.
 - b. Select "Contacts" to set this screen saver to display when you receive a call from a specific person in your contact list.
 - c. Select "Incoming Call" to set this screen saver to display when you receive an incoming phone call.

Full Track Music**How to Download Full Track Music**

1. Select "Menu".
2. Select "Music".
3. Browse music and select the song you would like to download.
4. Select "Preview" to listen to a clip of the song.
5. Select "Buy Song" to purchase the song.
6. Once the song has completed downloading, you play the song or add it to your playlist.

How to Play Full Track Music on your phone

1. Select "Menu".
2. Select "Music".
3. Press the right arrow button to go to "Player".
 - a. To play full track music in a playlist you have created, simply select the playlist and select the song you would like to listen to.
 - b. To play full track music that you have downloaded but have not put in a playlist, select "All My Music" and select the song you would like to listen to.

How to Download Full Track Music to your PC

Once you have downloaded a song to your phone from the Mobile Music Store:

1. Go to www.sasktel.com/getmusic
2. Log in with your 10-digit cell phone number and your password.
3. Songs that you have downloaded to your phone but not to your PC will appear in a list under "Available Downloads".
4. Select the song you would like to download to your PC and click the download icon.
5. Select "Save" to save the file to your PC.

6. The song will be saved as a .wma file on your PC.

Mobile Browser

How to Access Mobile Browser

1. Press the “Menu” button.
2. Select “Web”.

Streaming Services

How to Access Streaming Video

1. Press the “Menu” button.
2. Select “Media Player”.
3. Select “Channel Listing”.
4. Select “Video”.
5. Select the channel you want to watch.

How to Access Streaming Radio

1. Press the “Menu” button.
2. Select “Media Player”.
3. Select “Channel Listing”.
4. Select “Audio”.
5. Select the music genre you want to listen to.

Say & Send

How to Send a Say & Send Message

1. Dial **#8767** on your SaskTel post-paid cellular phone.
2. The initial menu will provide you with the option to:
 - press **1** to review all of your messages, or
 - press **2** to send a message.

Note: The first time you access the service there will be an extended greeting with slightly different prompts, but they will remain consistent after you begin using the service.
3. After recording the message:
 - Pay-per-use customers must enter the recipient’s 10-digit phone number.
 - Subscription customers can press **1** to address their message to a phone number or press **2** to use your Say & Send address book.
4. Once the message has been addressed, you can simply hang-up and the message will be sent. If you stay on the line, you’ll be provided with additional menu options.
 - press **1** to send the message,
 - press **2** to listen to your message,
 - press **3** to add recipients (up to 15 recipient per message),
 - press **#** to re-record the message or
 - press ***** to cancel the message altogether.
5. After your message is sent, you can disconnect or return to the main menu to send a new message or review any messages that are waiting for you.

How to Listen and Reply to a Say & Send Message

1. You will receive a text message notification that there is a new message waiting for you. To access the message simply press the **Send** or **Talk** key on your phone or dial #8767.
2. You will hear a welcome message for the service then the Say& Send message will play. If you have multiple messages, they will play in order from the newest to the oldest. You can skip messages by pressing the # key.
3. After listening to the message, you'll have the option to:
 - o **reply to the message** (press **1** and record/send the same way as creating a new message),
 - o **forward the message** to another post-paid SaskTel customer (press **2**),
 - o **delete the message** (press **3**),
 - o **replay the message** (press **4**), or
 - o **receive envelope information** for the message (press **5**).
4. After reviewing your messages, you can disconnect or you'll be taken back to the main menu for the service.

Note: The Say & Send text message notification is always the same. It reads "You have a Say& Send message from **Sender's name** or **Sender's cell phone number**. To listen, press send or call #8767". If you do not delete each text message notification, the next time you receive a Say & Send text message notification, it will appear as a duplicate message. To prevent this from happening make sure you delete the notification messages.

How to Access and Manage your Say & Send Account Online

1. Go to www.sasktel.com.
2. Click on "Mobility" under the "Personal" heading.
3. Click on "Features" – on the left-hand side of the page.
4. Click on "Say & send service".
5. Click on "Manage my Say & Send account" under "Say & Send Support" – Right-hand side of the page.
6. Sign in with your 10-digit cell phone number and your Say & Send password.
7. Now you can listen to and manage your messages, create contacts and distribution lists and change your password.